# All Terrain Travel System Stroller



KEEP INSTRUCTIONS FOR USE.
Read all instruction before using this product.
WARNING A Failure to follow the warning on the labels and in the instruction manual can result in serious injury or death to your child.



4358-8077A

9.13.22

## Contents

Warnings	3 3-4
PARTS AND FEATURES  ASSEMBLY Unfold the Stroller Attach the Rear Wheels Attach the Front Wheel Attach the Parent Tray Child's Tray	5 6 6 7 8 9
USING THE STROLLER  Adjust the Canopy.  Adjust the Handlebar.  Using the Safety Wrist Strap.  To Store the Wrist Strap.  Using the 5-Point Safety Restraint System  Adjusting the Seat.  Adjusting the Shoulder Strap Height.  Using the Front Wheel and Swivel Lock.  Using the Parking Brake.	10 10 10 11 11 12 13 14 15
TO INSTALL INFANT CAR SEAT (SOLD SEPARATELY) TO FOLD STROLLER	16-17 18 18 19

# **!** WARNING

# FOR THE SAFETY OF YOUR CHILD, PLEASE READ THE FOLLOWING WARNINGS AND ASSEMBLY INSTRUCTIONS AND KEEP FOR FUTURE REFERENCE.

- Adult assembly required. **CAUTION:** Keep small parts away from children during assembly.
- NEVER LEAVE CHILD UNATTENDED. ALWAYS keep child in view when in stroller.
- AVOID SERIOUS INJURY from falling or sliding out. ALWAYS use seat belt. Check frequently to make sure it is secure.
- ALWAYS keep fingers away from moving parts, when folding, unfolding or adjusting stroller to prevent finger entrapment.
- ALWAYS make sure stroller is FULLY OPEN AND LOCKED before using.
- **ALWAYS** use the brakes when stroller is stopped.
- ALWAYS remove protective material and poly bags and dispose before assembly.
- **NEVER** use stroller on stairs or escalators.
- NEVER put hot liquids in the cup holder.
- NEVER rollerblade with stroller.
- **NEVER** allow children to play with or hang onto the stroller.
- NEVER allow children to climb into the stroller unassisted. Stroller may tip over and injure child.
- **NEVER** place or hang parcels, bags or accessories on the handle or canopy. The stroller may tip over or the canopy may collapse.
- This product will become unstable if a parcel bag or rack is used when there is no provision for one.
- This product may become unstable if a parcel bag, other than the one recommended by the manufacturer is used.
- This product will become unstable if the manufacturer's recommended load is exceeded.
- **DO NOT** carry additional children, goods or accessories in or on this product except as recommended in the manufacturer's instructions.
- NEVER place more than 2 lbs. (0.91 kg) in parent's tray to prevent tipping.
- **NEVER** place more than 10 lbs. (4.5 kg) in the storage basket. If weight is exceeded, hazardous unstable conditions may exist.
- **STROLLER** is only for use with children up to 50-lbs. (22.7-kg), and **WHEN SEATED**, the midpoint of the child's head is at or below the top of the stroller seat.
- ONLY use this stroller with ONE child at a time.
- STROLLER is for use with children who can sit up unassisted, and is **NOT** recommended for newborns.
- FALL HAZARD: Wheel can detach and cause tipover. Pull on wheel to assure it is securely attached.
- FALL HAZARD from tip over. Before running, jogging, or walking fast, LOCK the front wheel from swiveling.

#### Before each use check:

- The stroller for damage. Do not use if damaged.
- The tire pressure. If necessary inflate the tires to within the range shown on the tires sidewall. Always use a foot or hand pump to inflate the tires.
- The fasteners are tight. Tighten if necessary.
- Front wheel is locked from swiveling before running or jogging.
- All loose items are removed from the passenger compartment.
- Maximum weight that can be carried in the under seat basket is 10 lb (4.5 kg). The parent/child tray is 2 lb (1 kg) each.

#### During use be sure to:

- Take proper steps (clothing, ventilation, hydration) to protect the child from exposure hazards such as wind chill and heat exhaustion. These hazards will have a greater impact on the less active passenger.
- Only an adult who can physically control the vehicle should use the stroller. Never allow the stroller to be used by children as a toy.
- Always lock the front wheel before jogging with the stroller.
- Failure to lock the front wheel when jogging with the stroller may cause the stroller to become unbalanced, tip over or lose control.
- Check frequently to be sure that child is properly secured in restraint system
- Always maintain a safe speed. Avoid quick, sharp changes in direction, as tip-over may occur. The stroller is not intended for use at high speeds.
- Allow extra clearance for the stroller when near curbs, parked cars, and other obstacles. The stroller requires a wide turning radius. Do not turn sharply.
- Use caution when turning on loose or uneven surfaces and when going downhill.
- Always engage the parking brakes when stopping, releasing the handle or loading / unloading children.
- Keep the safety wrist strap on until you are sure the stroller is completely stopped.
- Do not travel over curbs, bumps or holes.
- Do not pull or push the stroller with a vehicle.
- Do not lift stroller by child and/or parent tray or canopy.
- Lay out and identify all parts.
- Do not return this product to the place of purchase. If any parts are missing, call Consumer Relations at 0800 628 000(toll free)
- Include the model number and manufacture date (found on stroller frame) and a brief description
  of the part.
- · Keep these instructions for future use.

#### **Parts and Features**



#### **Keep These Instructions for Future Use**


- Lay out and identify all parts.
- Please do not return this product to the place of purchase. To address any issues or for helpful information on assembly/installation or use, please visit us at www.safety1st.ca to chat with us there. You can also text us at (812) 652-2525 or call Consumer Care at (800) 544-1108. To help you, we would need the model number (01327C) and the manufacture date (located on the back of stroller). We will be happy to help.


## **Assembly**


#### **UNFOLD THE STROLLER**

# **MARNING**

- ALWAYS keep fingers away from moving parts, when folding, unfolding or adjusting stroller to preventfinger entrapment.
- Ensure that all locking devices are engaged before use.

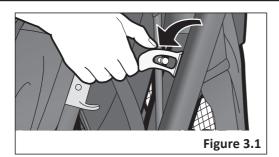

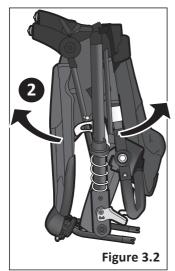

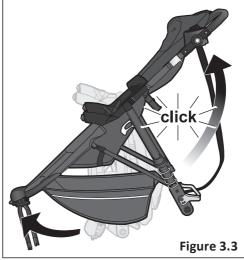


- 1 Unlatch side frame lock. Figure 3.1
- Continue holding lock open while pulling up on handle **Figure 3.2** until frame "clicks" into place. **Figure 3.3**


#### Assembly continued...

#### ATTACH THE REAR WHEELS

- 1 Push rear wheel into hole until it clicks into place. Pull on wheel to make sure it is secure. Repeat on other wheel. **Figure 3.4**
- 2 To remove rear wheels:
  Lift release lever while pulling on wheel. Repeat on other wheel.
  Figure 3.5.

TIRE PRESSURE NOTE: inflate tire pressure to 35-psi. Use a manual bike pump to inflate tires. NEVER use an air compressor to fill tires with air (like those used at gas stations).

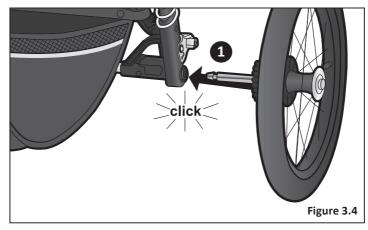

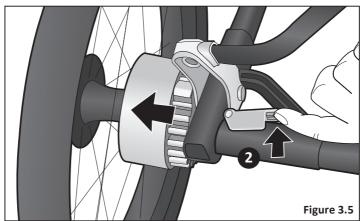


#### Assembly continued...

#### ATTACH THE FRONT WHEEL

- 1 Position the stroller so the handle rests on the ground, with the fork facing up. Figure 3.6
- 2 To ease assembly, flip swivel latch to the right to lock the fork in a fixed position.
- 3 Set the wheel into the forks, aligning the center of wheel to the openings in the fork.
- Insert the bolt into the openings on the fork. Hand tighten the cone nut until snug.
- 5 Using the included 5mm Allen wrench, tighten the cone nut completely.

Important! Ensure that the bolt is tightened firmly and securely. Recommended torque range: 35-55 lb/in.

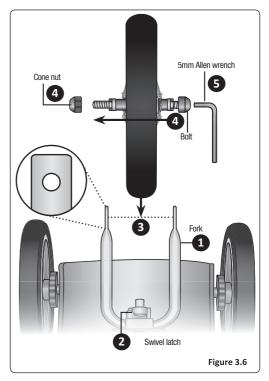

6 Pull on the wheel to ensure it is securely locked in place. If necessary, loosen the nut, re-tighten, and re-check wheel.


TIRE PRESSURE NOTE: Inflate tire pressure to 25-psi. Use a manual bike pump to inflate tires.

NEVER use an air compressor to fill tires with air (like those used at petrol stations).

#### Assembly continued...

#### ATTACH THE PARENT TRAY


1 Align posts with holes on parent tray. Snap parent's tray onto handlebar tubes. Figure 3.7

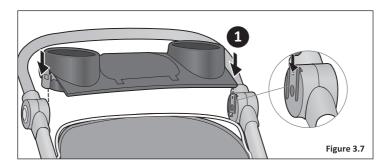

#### **CHILD'S TRAY**

**To Attach:** Guide tray tabs into slots on stroller frame. Push until tray clicks into place. **Figure 3.8** Push until tray clicks into place.


**To Remove:** Squeeze release levers on both sides and lift tray up and off.

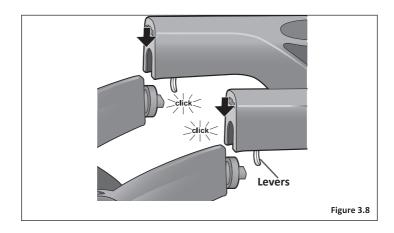

## **Using The Stroller**


#### **ADJUST THE CANOPY**

1 Rotate the canopy into any position. Figure 4.1

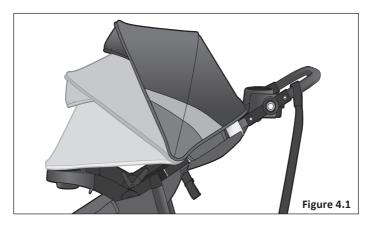

#### **ADJUST THE HANDLEBAR**

1 Press buttons on both sides of the handlebar and rotate up or down as desired. Figure 4.2

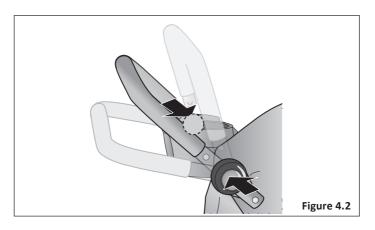


#### **USING THE WRIST STRAP**

# **MARNING**


Using the stroller without the safety wrist strap may result in the user becoming separated from the stroller and serious injury or death to the passenger. Always use the safety wrist strap when using the stroller. Always engage the rear parking brakes before removing the strap from your wrist.


1 Place your hand through the large loop in a position so the strap is comfortable and secure. Figure 4.3

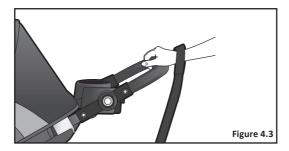

#### TO STORE WRIST STRAP

1 Two ways to store wrist strap when not in use: hang wrist strap on handlebar Figure 4.4, or place strap in basket. Figure 4.5

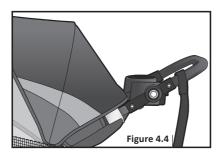


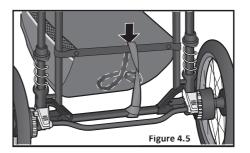

#### **USE THE 5-POINT RESTRAINT SYSTEM**

## **!** WARNING

- NEVER LEAVE CHILD UNATTENDED. ALWAYS keep child in view when in stroller.
- AVOID SERIOUS INJURY from falling or sliding out. ALWAYS use seat belt. Check frequently to make sure it is secure.
- Belts must be threaded exactly as shown (Figure 4.8).
- Failure to follow these instructions could result in the serious injury or death of your child.

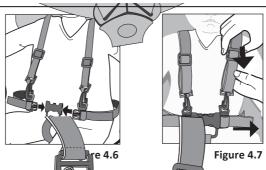


- Place your child in the stroller, with the crotch strap between the child's legs. Fasten both buckles. **Figure 4.6** Tighten waist and shoulder straps snugly around your child. **Figure 4.7**
- 2 Shoulder straps:

**To tighten**, loosen strap at (A) and slide buckle up. **Figure 4.8 To loosen**, loosen strap at (A) and slide buckle down. **Figure 4.8** 

#### Waist straps:

To tighten, pull end (C).
To loosen, loosen strap at (B).
Figure 4.8.

NŎTE: If the straps should come out of the buckle, rethread as shown. **Figure 4.8** 

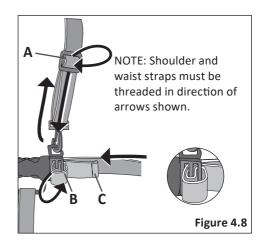



#### **ADJUSTING THE SEAT**

## **!** WARNING

- Improper adjustment of the 5-point safety harness when the seat is in the reclined position may result in the child slipping into the leg openings and strangulation. Always re-adjust the 5-point safety
- 1 To lower seat back completely: Lift the clamp lever Figure 4.9 and lower seat back. Figure 4.10 Push clamp lever closed.
- 2 To raise seat back: Lift clamp lever. Hold end of strap, slide clamp lever up, pushing seat forward and push clamp lever closed.

NOTE: **DO NOT** adjust the seat when your child is in the stroller.

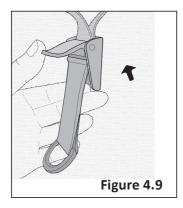

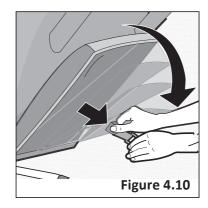


#### ADJUSTING THE SHOULDER STRAP HEIGHT


## **MARNING**


• For proper installation of the restraint system, make sure both anchors lay flat against the back board.


Use these seat height slots to properly adjust the height of the shoulder straps to your child's height. To adjust the shoulder strap height:

- 1 Starting from the back of the seat, pull the shoulder strap anchor away from the seat. Figure 4.11
- Insert the anchor through the slot in the seat, pushing it towards the front. Figure 4.12
- 3 Re-insert the anchor through the slit in the front of the seat at the desired height. **Figure 4.13**
- 4 Pull the strap and anchor all the way through to the back. Make sure the strap is properly anchored on the seat back. Repeat these steps for the opposite strap. Figure 4.14

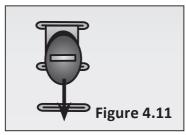

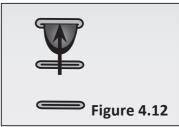

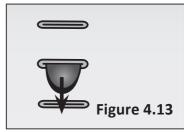


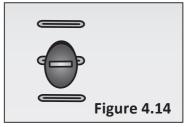

#### USING THE FRONT WHEEL AND SWIVEL LOCK


## **⚠ WARNING**

- FALL HAZARD from tip over. Before running, jogging, or walking fast, LOCK the front wheel from swiveling.
- FALL HAZARD: Wheel can detach and cause tip over. Pull on wheel to assure it is securely attached.
- 1 Push tab up until it "clicks" allowing wheel to swivel around. Figure 4.15
- 2 Engage Front Swivel Lock: With the wheel straight, push tab down until it "clicks" to keep front wheel from swiveling. Figure 4.16 NOTE: Locked position is ideal for travel over rocky or uneven surfaces. Wheel locked is required for jogging.

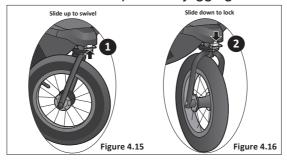

#### USING THE PARKING BRAKE

- Lock Brakes: Step down onto brake bar between rear wheels to lock both rear wheels. Figure 4.17 To park stroller, BRAKES MUST BE LOCKED
- 2 Unlock Brakes: Lift up on brake bar to unlock brakes.

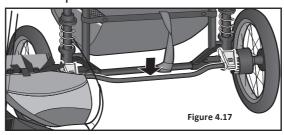


#### To Install Infant Car Seat


## **MARNING**

To avoid serious injury:

- Use ONLY IC178, IC181, IC201, IC203, IC205, IC206,IC207, IC208, IC210, IC211, IC212, IC217, IC218, IC219,IC220, IC224, IC226, IC228, IC229, IC230, IC231, IC233,IC234, IC240, IC244, IC250, IC251, IC252, IC258, IC259,IC261, IC263, IC267, IC279, IC280, 22036, 22056, 22326 infant car seats with this stroller.
- Please refer to the manufacturer's instructions for the use of your infant car seat.
- ALWAYS use child's tray when car seat is installed.
- **NEVER** use child tray cup holder when car seat is attached tostroller. Stroller may tip over and injure infant.
- ALWAYS install car seat facing to the rear of the stroller.
- ALWAYS use the restraint system in the car seat.
- 1 Recline seat back to lowest position. Figure 5.1 Close canopy.


Car seat must be positioned so child faces the stroller handle. Position car seat over the stroller. Touch rear flat vertical surface of car seat A against rear vertical surface of the child tray B. Lower straight down into stroller and push down on handle. Car seat will click into place when fully nested. Figures 5.2 and 5.3

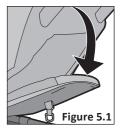

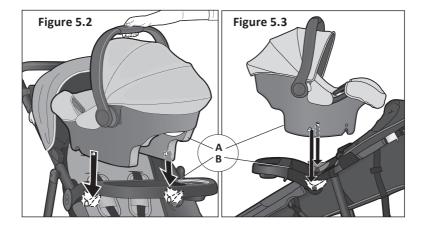


#### To install Infant Car Seat continued...


When properly installed, car seat will come to rest on child tray and stroller frame. Figure 5.4

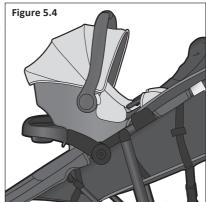

2 Pull up on car seat to make sure it is securely installed. **Figure 5.5** 

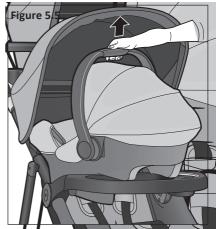



To remove the car seat, pull the release lever as shown. Figure 5.6 Lift car seat.

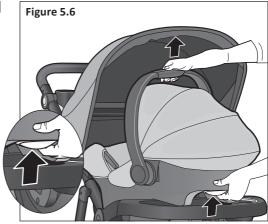

#### To Fold Stroller

- 1 Lock rear brakes. Remove your baby. Close canopy. Unlock front wheel.
- 2 Pull up on BOTH fold release buttons found on both sides of the stroller underneath the parent tray. **Figure 6.1**
- Push the handlebar down until the side frame lock clicks into place. Figure 6.2
- 4 Stroller can stand alone. Figure 6.2

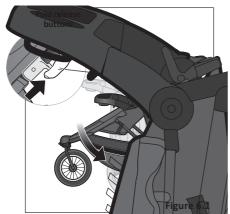

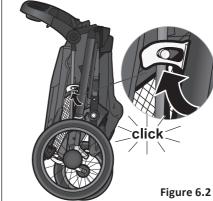

### **Replaceable Parts**

- Single front wheel
- Single rear wheels
- Child's tray
- · Parent's tray
- To order parts call 0800 628 000 (toll free)
- Include the model number and manufacture date (found on the stroller) and a brief description of the part.

#### To install Infant Car Seat continued...

- To clean stroller fabric and seat pad, use a sponge or damp clothwith cold water and mild soap. Drip dry only. Do not use harsh household cleaners or bleach to clean stroller.
- Restraint and crotch straps should be surface washed and air dried only. Do not place in washing machine or dryer.
- Periodically, check for loose screws, worn parts, torn material or loose stitching. Tighten or replace parts as needed.

## **One-Year Limited Warranty**

Dorel Juvenile Group, Inc. warrants to the original purchaser that this product (All Terrain Travel System), is free from material and workmanship defects when used under normal conditions for a period of one (1) year from the date of purchase. Should the product contain defects in material or workmanship Dorel Juvenile Group, Inc., will repair or replace the product, at our option, free of charge. Purchaser will be responsible for all costs associated with packaging and shipping the product to Dorel Juvenile Group Consumer Relations Department at the address noted on front page and all other freight or insurance costs associated with the return. Dorel Juvenile Group will bear the cost of shipping the repaired or replaced product to the purchaser. Product should be returned in its original package accompanied by a proof of purchase, either a sales receipt or other proof that the product is within the warranty period. This warranty is void if the owner repairs or modifies the product or the product has been damaged as a result of misuse. This warranty excludes any liability other than that expressly stated previously, including but not limited to, any incidental or inconsequential damages.

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS THAT MAY VARY FROM STATE TO STATE.



#### **DOREL AUSTRALIA PTY LTD**

655-685 Somerville Road Sunshine West Victoria 3020 Email: customerservice@dorel.com.au Phone: 1300 809 526

Hours: 8:30 am - 5:00 pm Monday to Friday

#### IGC DOREL NEW ZEALAND LTD

14 Sir William Avenue
East Tamaki Auckland 2013
Email: customerservice@dorel.co.nz
Phone: 0800 628 000 (toll free)
Hours: 8:00 am - 5:00 pm Monday to Friday

www.safety1st.com



Specifications are subject to change without notice.
Copy or reproduction without permission is prohibited.
© 2018 Dorel Australia Pty Ltd. All Rights Reserved.
www.dorel.com.au