

Edinburgh

TRAVEL  
ISIZE CAR SEAT

For your child's safety



please read these instructions carefully before use

**INSTRUCTION  
MANUAL**

Height:40-150cm

01	PRODUCT OVERVIEW	01-02
02	SAFETY WARNING	03
03	USAGE	
	3.1 Install position of the child seat in vehicle	04
	3.2 Adjust the headrest	05
	3.3 Checking the shoulder strap height	05
	3.4 Usage of buckle	06
	3.5 Adjust the length of harness	06
	3.6 Remove the shoulder strap	07
	3.7 Remove the Cheat pad and Cheat strap	08
	3.8 Remove the crotch pad and locker	08
04	INSTALLATION	
	Installed rearward-facing (Height:40-105CM, Weight: 0-18kg)	09-11
	Installed forward-facing (Height: 100-150CM, Weight: 15-36kg)	12
05	MAINTENANCE AND CLEANING	13
	5.1 Daily maintenance	
	5.2 Washing instruction	
	5.3 Remove and assemble the fabric cover	
06	THE MAIN TECHNICAL PARAMETERS	14

" UNIVERSAL BELTED " NOTICE

- This is Universal Belted Enhanced Child Restraint System. It is approved according to UN Regulation No. 129, for use primarily in "Universal seating positions" as indicated by vehicle manufacturers in the vehicle user's manual.
- If in doubt, consult either the Enhanced Child Restraint System manufacturer or the retailer.

" I - SIZE BOOSTER SEAT " NOTICE

- This is a i - Size booster seat Enhanced Child Restraint System. It is approved according to UN Regulation No. 129, for use primarily in " i - Size seating positions" as indicated by vehicle manufacturers in the vehicle user's manual.
- If in doubt, consult either the Enhanced Child Restraint System manufacturer or the retailer.

**\* DO NOT use the device in seating positions where an active frontal airbag installed.**

- This product can be rearward-facing used by 5-point safety system for children with a height of 40-105cm (Weight: 0-18kg, about 0-4 years old), using adult three-point belt to fix the child restraint system;
- This product can also be forward-facing for children with a height of 100-150cm (Weight: 15-36kg, about 4-12 years old), using adult three-point belt to fix the child restraint system;
- Do not use any load bearing contact points other than those described in the instructions and marked in the child restraint;
- Please keep for future reference, a storage compartment for the instructions is located on the back of the child seat;
- Do not use this child seat at home. It has not been designed for home use and should only be used in your car;
- Do not use rearward facing child seat in seating positions where there is an active frontal airbag installed, death or serious injury can occur;
- For the reason of safety, the child seat must be fixed inside the vehicle using adult three-point belt even if you do not put your child inside the child seat;
- The rigid items and plastic parts of a child seat shall be so located and installed that they are not liable, during everyday use of the vehicle to become trapped by a moveable seat or in a door of the vehicle;
- Any straps holding the restraint to the vehicle should be tight;
- Any straps restraining the child should be adjusted to the child's body;
- Straps should not be twisted;
- Ensure that any lap strap is worn low down, so that the pelvis is firmly engaged, shall be stressed;
- The device should be replaced when it has been subject to violent stresses in an accident;
- It's dangerous to make any alterations or additions to the device without the approval of the Type Approval Authority, also dangerous not to follow closely the installation instructions provided by the manufacturer;
- When the seat is not provided with a textile cover, the seat should be kept away from sunlight, otherwise it may be too hot for the child's skin;
- Don't leave your child in the device unattended;
- Any luggage or other object liable to cause injuries in the event of a collision shall be properly secured;
- The seat cover should not be replaced with any other than the one recommended by the manufacturer, because the cover constitutes an integral part of the restraint performance;


The instructions shall be retained on the device for its life period or in the vehicle handhook in the case of built-in restraints;

The user shall also be referred to the vehicle manufacturer's handhook;

Never use a second-hand product, as you can never be certain what happened to it.


**03** **USAGE**

3.1 Install position of the child seat in vehicle

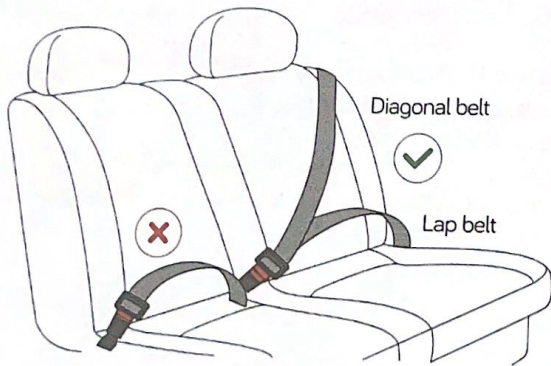


- ✓ Proper installation
- ✗ Improper installation

Only suitable if the approved vehicles are fitted with 3 point safety-belt, approved to UN/ECE Regulation No.16 or other equivalent standards.

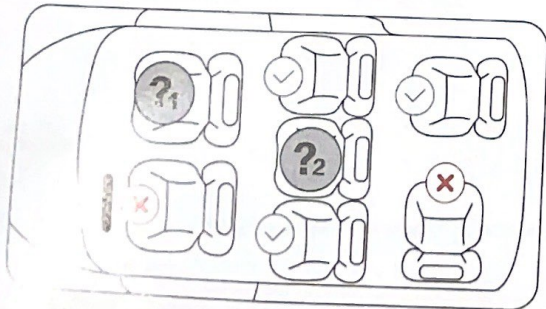

- ?<sub>1</sub> Not to use rearward-facing in seating positions where an active frontal airbag is installed.
- ?<sub>2</sub> Only use on this seat if a lap and diagonal seat belt is fitted.

### 3.2 Adjust the headrest

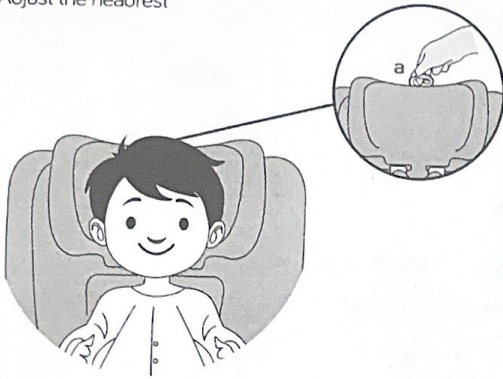

- As shown in the picture, you can adjust the headrest up and down by pulling on the headrest adjustment tab a, and adjust the headrest to a position suitable for the child's head.

### 3.3 Checking the shoulder strap height



✘ too low




✘ too high



✔ slightly higher

- Always check that the shoulder straps are at the correct height for your child. The child's shoulder straps should always be threaded through the slots in the cover and seat shell that are closest to the top of your child's shoulders.

### 3.4 Usage of buckle

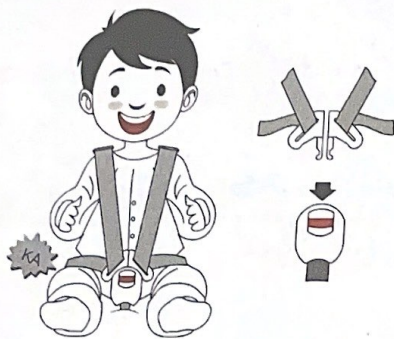

Buckle 08 (sketch map)

- Get the left and the right pieces of buckle together.
- Insert the two pieces into the slot of the buckle. At the same time, hearing "click" means the buckle gets stuck, pull the pieces of the buckle and check whether the buckle is locked correctly.

\* If you want to release the safety belts, it needs to press the red button, then the pieces pop up.

### 3.5 Adjust the length of harness




- Loosen the shoulder strap 05  
The shoulder strap can be slackened by pressing the adjuster (under the seat cover 10) on the front of the seat. Press down the adjuster as you grip the two shoulder straps with your another hand. Pull the harness towards you to loosen the shoulder strap.



- Tighten the shoulder strap **05**  
Pull the shoulder strap upward to remove the slack from the lap sections of the harness then pull the front stretch belt until the harness adjuster strap **12** is fully tightened.
- \* The shoulder strap should be adjusted as tightly as possible without causing discomfort to your child. A loose shoulder strap can be dangerous.
- \* Check the shoulder strap adjuster and tighten each time when the child is placed in the seat.


3.6 Remove the shoulder strap

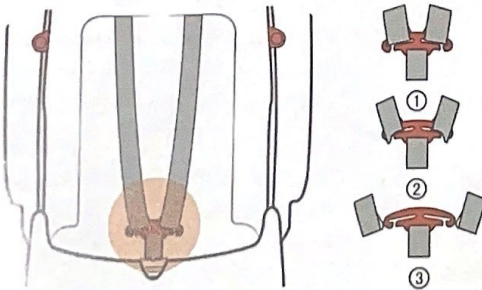

- Loosen the shoulder harness turn the child seat to the back. Slide the chest straps and shoulder straps off the harness connectors.( As shown in figure ①②③)




3.7 Remove the Cheat pad and Cheat strap

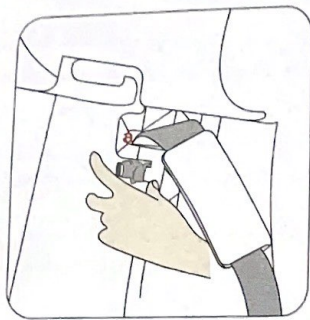

- Loosen the cloth cover inside the seat and adjust the headrest to the highest position (see page 5, 3.2 of the manual). Pull out the shoulder cover and shoulder strap from the headrest hole as shown in Figure 1.

3.8 Remove the crotch pad and locker

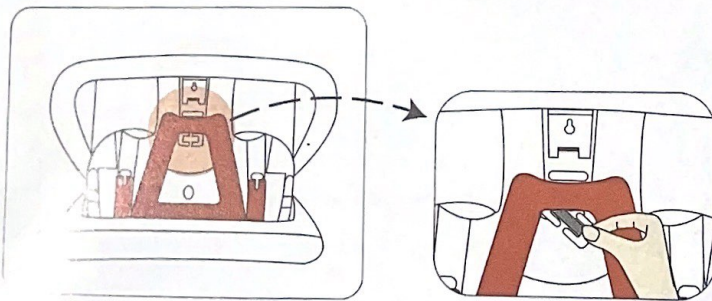


- Adjust the child seat to position 4 and turn it to the bottom. Turn the harness locking clip on their narrowest end and thread it through the slot under the bottom of the child seat. So the crotch pad and locker as well as harness straps can be removed.

04

## INSTALLATION

Installed rearward-facing (Height 40-105CM, Weight: 0-18kg)

\* DO NOT use the device in seating positions where an active frontal airbag installed.

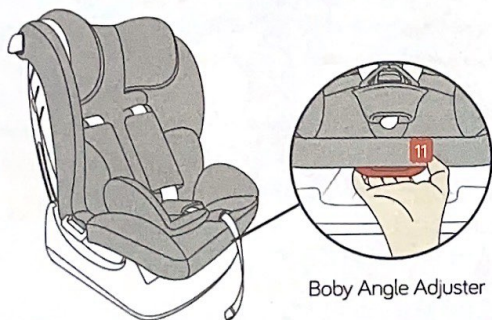


Boby Angle Adjuster

- Method: Pull out the Bobby Angle Adjuster **11** under the seat, adjust to the most inclined gear, and hear a sound of "click".




- Put the child seat rearward facing on the car seat and make sure that the front of the child seat is firmly pressed against the car seat backrest.

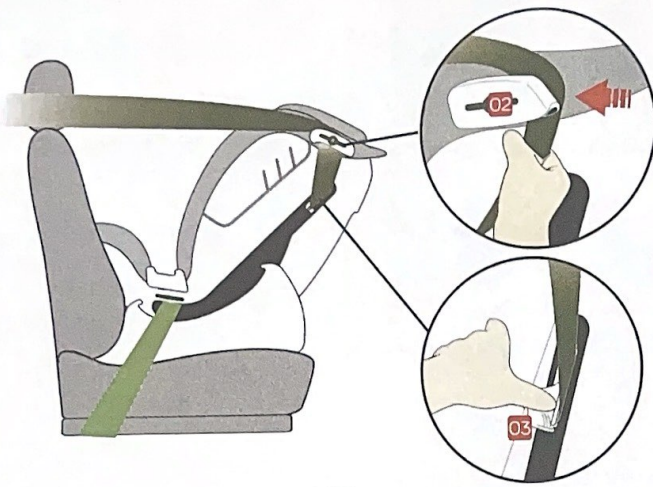

Shoulder belt    
  Lap belt

- As shown in the figure, firstly, snap the vehicle shoulder belt into the child restraint system's belt guide hook **02** and belt clip **03** on the same side, and then pass the vehicle lap strap through the guide hook over the side of the child restraint base.

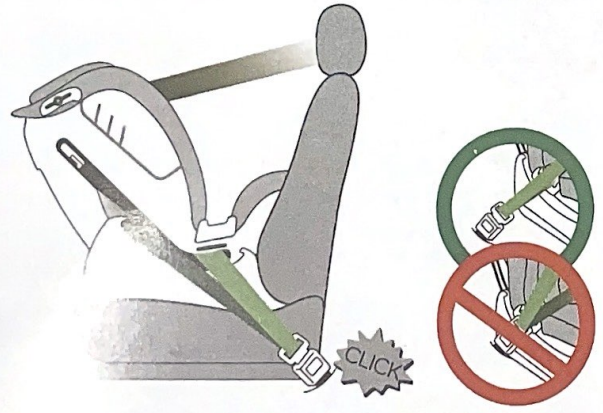

- Insert the diagonal belt together with lap belt into car seat belt buckle until you hear a "click" sound. Check the car seat belt buckle is correctly locked by pulling the seat belt upwards.


\* When using, it should be confirmed that the buckle of the adult 3-point belt does not interfere with the main load-bearing contact point of the child restraint system. If in doubt, pls contact the manufacturer of the child restraint system.



- Put your child into child seat.
- \* Check the height of shoulder belts on the correct position and fasten the buckle 08.
- \* Check that the harness has not been twisted.
- \* Check that the cover is not impeding the movement or fit of the harness in anyway.

**IMPORTANT:**

The 3-point adult belt passes through the backrest as the picture shown:

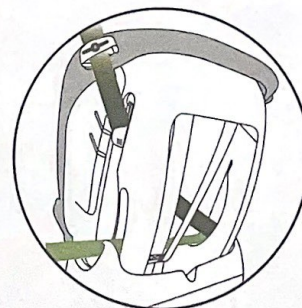

Installed forward-facing (Height:100-150CM, Weight: 15-36kg)



- Put the child seat forward facing on the car seat and make sure that the front of the child seat is firmly pressed against the car seat backrest.

■ Shoulder belt ■ Lap belt



- Place the child on the restraint system and adjust the height of the headrest. Make sure that the headrest is at the height of the child's shoulder and is fixed;
- Pull out the 3-point adult belt, the shoulder strap must pass through the headrest, and then pass through the belt slot **03** together with the lap belt, insert it into the buckle slot.

\* Make sure the car seat belt is not slack or twisted.


\* When using, it should be confirmed that the buckle of the adult 3-point belt does not interfere with the main load-bearing contact point of the child restraint system. If in doubt, pls contact the manufacturer of the child restraint system.

## 5.1 Daily maintenance

- In daily use, check periodically the child seat. The child seat should be replaced after an accident.
- Please keep this child seat in dry and ventilated place to avoid damp moldy.
- If the child seat becomes dusty, clean the seat belt and the plastic pieces by swiping them with a damp sponge and let it dry under ambient.
- If food or drink drop accidentally on the buckle, disassemble the seat belt from the child seat and rinse it gently by warm water. Leave it dry under ambient.
- For cleaning the entire child seat fabric cover, please refer to the 5.2 washing instruction.

## 5.2 Washing instruction

- Never use any solvent, chemical detergent or lubricant on any part of your child seat.

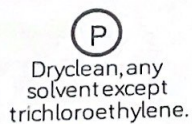


## 5.3 Remove and assemble the fabric cover

- Firstly, remove the crotch pad and buckle of the child seat and then remove the shoulder straps and comfortable cushion.
- Remove the fabric cover of the child seat.
- **To install the fabric cover, please operate follow the above instructions in reverse order.**

06

## THE MAIN TECHNICAL PARAMETERS

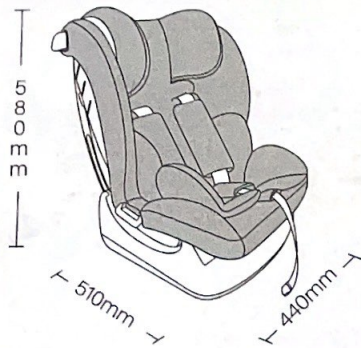

- Distance from front to back of the seat: 510mm
- Distance from left to right of the seat: 440mm
- Height of the seat: 580mm
- Weight of the seat:  $5.9 \pm 0.5$ kg

Supplied by  
**Baby Factory (NZ) LTD**

58 Stonedon Drive, East Tamaki, Auckland, 2013

09 274 4986

[WWW.babyfactory.co.nz](http://WWW.babyfactory.co.nz)